

AD 2001 AUTOMATIC VOICE/PAGER DIALER

Requires a telephone line in close proximity to the receiver.

To set up your dialer--

Plug the telephone cord (included) into the Telephone In jack of the dialer and into the telephone wall jack. (You may plug a telephone or fax into the Telephone Out jack of the dialer.) Plug the power cord (included) into the silver port of the dialer and into the Aux. Power Dialer port of the receiver. Plug the attached banana plugs of the dialer into the Dialer ports of the receiver. You must have a strong dial tone for your dialer to work. Phone numbers should be programmed exactly as they would be dialed from a landline, ie: only enter the area code if required and only enter a (1) if the call is long distance. If you are dialing cell phones, make sure that the "music hold" feature of the cell phone is disabled. If you do not have a land line phone plug in your calling area, please check with your cellular provider. Many of them offer a device that accepts a land line phone plug while using a cellular signal.

PROGRAMMING THE DIALER:

Program telephone numbers--The LCD will read "OFF". Press the "M" key (mode key) of the keypad.

- 1) The display will read "PROGRAM NUMBERS 1(YES) 2(NO)". Press 1.
- 2) The display will read "SELECT: 1-4/ 0 DONE". To enter the first number you wish the dialer to call when activated, press 1.
- 3) The display will read "PAGER 1(YES) 2(NO)". If entering a digital pager number press 1 for YES. For a voice pager or voice telephone press 2 for NO.
- 4) The display will read "ENTER NUMBER THEN PRESS*". Enter in the number you wish the dialer to call--enter the number exactly as it must be dialed--if it is long distance, you will need to enter a "1" and the area code.

For a numeric pager, enter the pager number, then press the "P" key 2 times to enter two 2 second pauses--(allows time for the pager to issue a signal (typically short "beeps") prior to accepting a numeric message. In cases where a voice message plays on the pager, a longer pause may be necessary to ensure delivery of the numeric message)--after entering PP, enter a numeric code to be shown on the pager being called. You may enter any code you like (for example: 777, 911, etc.)-make sure that the attendant with the pager knows that this code means the system has been activated. Enter a # if your pager requires this, then press the * key to store the number.

For voice pagers or voice telephones, enter the number to be called, then press the * key.

Repeat the process for numbers 2-4 to be called. You will Select (2) for the 2nd #, (3) for the 3rd, etc.. When all numbers have been entered, press "0" for DONE.

Program T-line--This information has already been programmed

- 1) The display will then read "PROGRAM T-LINE 1(YES) 2(NO)". Press 2 for NO. If you have a PBX system, press 1 for Yes. Screen will read "T LINE 1(TONE) 2 (PULSE)". Press 2. Display will read "PBX 1(ON) 2 (OFF)". Press 1 and enter the PBX number for your phone system. Display will read "ATTEMPTS 1-9" This sets the number of times each programmed number is dialed. Enter any number between 1 and 9. Display will read "Repeats 1-3". This sets the number of times your recorded message will be played when the telephone is answered. Enter the desired number.

Display will read "Disable Mic 1(YES) 2 (NO). Press 1 for yes.

Step 4--program outgoing message--

- 1) The display will read "PROGRAM OGMS 1(YES) 2(NO)". If you have programmed your dialer to call any voice pagers or telephones, press 1 for YES.
- 2) Display will read "OPT#1: NO OGM 1(YES) 2(NO)", press 2 for NO.
- 3) Display will read "OPT#2 1OGM 1(YES) 2(NO)". Press 1 for YES.
- 4) Display will read "RECORD OGM1 PRESS R". Press and HOLD the "R" key, speak into the microphone and record your message. Release the R key.
- 5) Display will read "PLAY OGM(S) 1(YES) 2(NO)"
- 6) Press 1 for YES to hear your message.
- 7) Display will read "ACCEPT 1(YES) 2(NO)". To accept, Press 1, otherwise press 2 and rerecord.

You may record a message up to 51 seconds long. The voice message will play twice when the dialer is answered.

Step 5--program channel--This information has already been programmed--dialer is set to dial 4 numbers.

- 1) Display reads "PROGRAM CHANNELS 1(YES) 2(NO)-- Press the "M" key to go to the TEST mode.
- 2) Display reads "TEST T-LINE 1(YES) 2(NO)--Press 1
- 3) The following information will scroll across the LCD--T-LINE TONE, PBX OFF, ATTEMPTS=2, REPEATS =2.
- 4) Display reads "TEST: CHANNELS 1(YES) 2(NO)--Press 1
- 5) Display reads "SELECT 1 or 2, 3(BOTH) 0(DONE)--Press 1
- 6) The following information will scroll across the LCD: CHANNEL 1-ENABLED, NO EXIT DELAY, NO ENTRY DELAY, NORMALLY OPEN, MOMENTARY, Dial #1--Dial#2, etc. The numbers you have programmed will scroll across the screen, and your voice message will play where applicable.
- 7) Display reads SELECT: 1 or 2 3(BOTH) 0(DONE)--Press the "M" key to go to the operate mode.

**Remember, the dialer cannot call the number of the telephone line you have it plugged into **You must have a normal dial tone for the dialer to operate **THE LCD SHOULD ALWAYS READ "OPERATE" when the dialer is being used.